

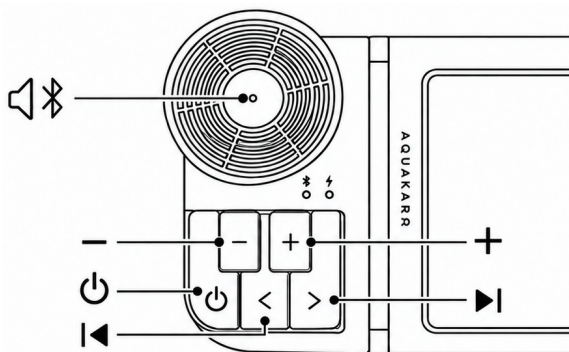


AquaKara®


AquaKara_101

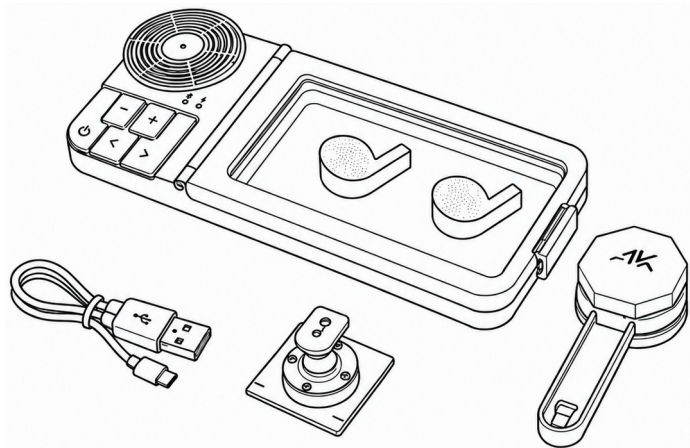


1

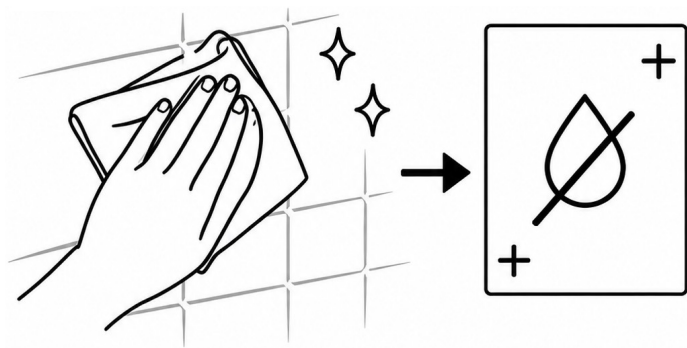



2

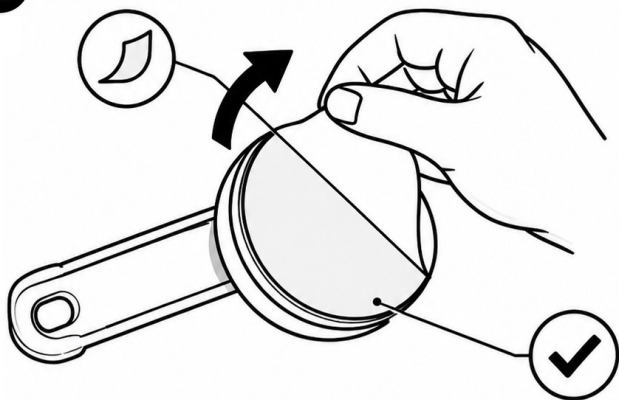

3

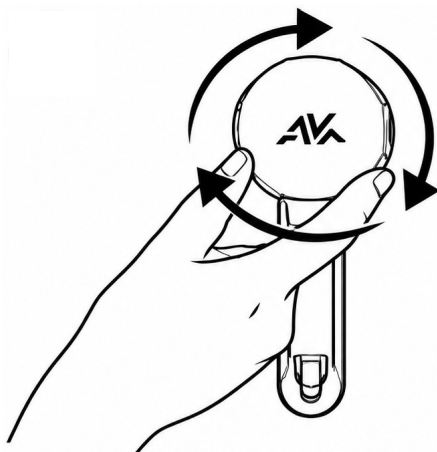


4

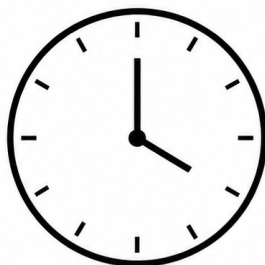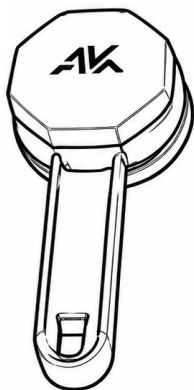


24 h


5

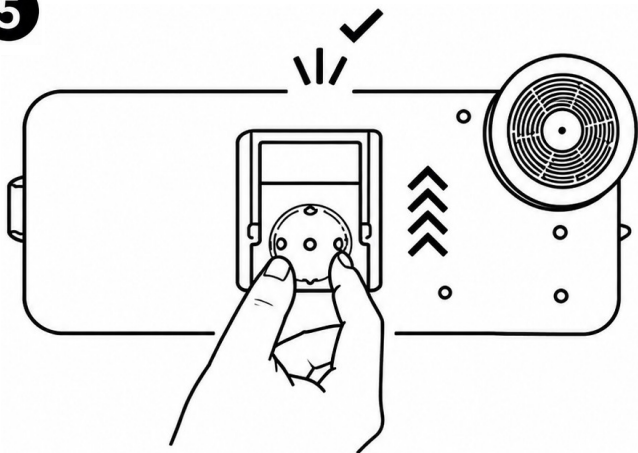


6

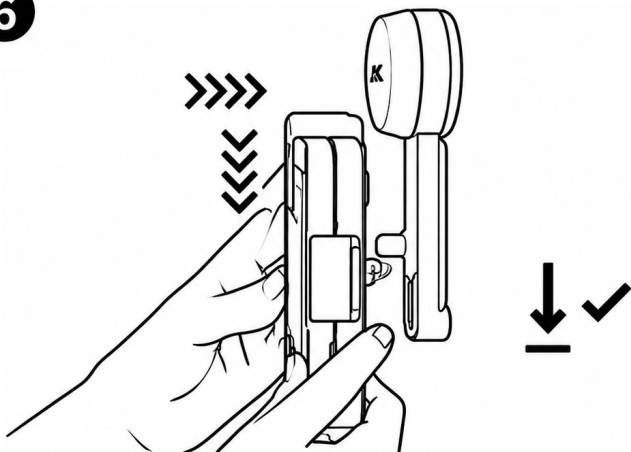


7

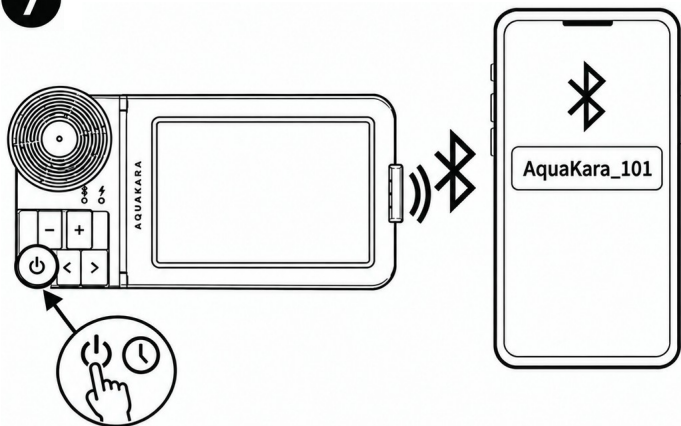

8

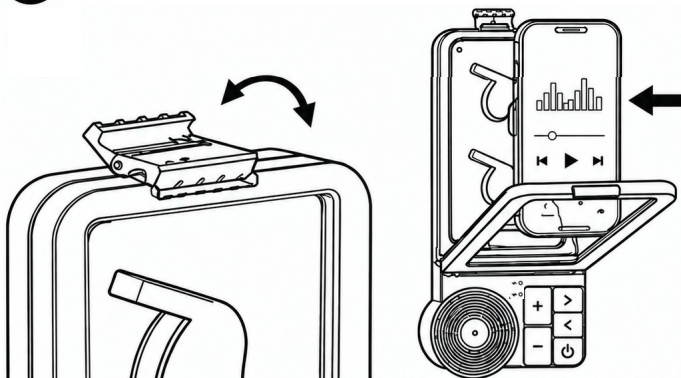



9

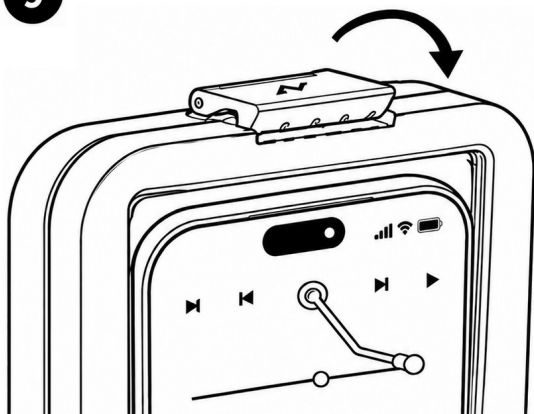

USB-C



10

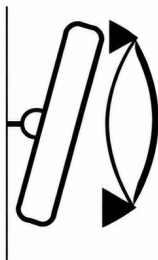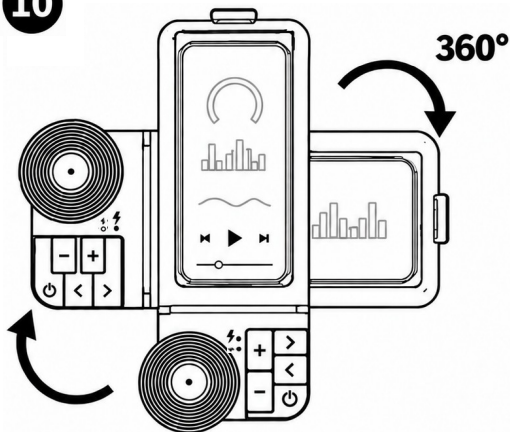

AquaKara®

OWNER'S MANUAL | Model: AquaKara_101

Shower Phone Case with Bluetooth Speaker

1. GETTING STARTED

PACKAGE CONTENTS

Before use, check that all items below are included:

1. Shower Phone Case with Bluetooth Speaker
2. Twist-Tight Wall Mount
3. USB-A to USB-C charge cable
4. Twist-Tight Mount Adapter

Phone not included.

CHARGING BEFORE USE Charge only in a dry location away from running water. Make sure the product and USB-C charging port are dry before connecting the cable. Open the USB-C charging-port cover. Connect the supplied USB-A to USB-C charge cable to the charging port and a standard DC 5 V / 1 A USB power source. After charging, disconnect the cable and close the charging-port cover securely. For charging-power information, see EU / Northern Ireland Charging Power.

QUICK START GUIDE

The Adhesive Mounting Pad is factory-installed on the Twist-Tight Wall Mount.

MOUNTING SURFACE The whole pad must contact one intact, continuous surface, with no gaps. Do not install over or across grout lines, tile joints or panel seams; holes, pits or open pores; cracks or chips; grooves, ridges, bumps or raised texture; or rough, curved, warped, uneven or peeling surfaces.

❶ Prepare the wall Choose a smooth, flat, rigid, non-porous area large enough for the whole pad. Remove dust, oil, soap and cleaner residue; let it dry completely.

❷ Peel the liner Remove the protective liner from the pre-installed Adhesive Mounting Pad. Leave the pad attached to the wall mount.

❸ Press and twist Press the wall mount firmly against the wall. Keep pressing while turning the knob clockwise until fully tightened.

❹ Wait 24 hours Leave the mount undisturbed and unloaded for 24 hours. Then gently check it is secure before attaching the case.

QUICK START GUIDE CONTINUED

5 Fit the adapter Slide the adapter onto the back of the case, smooth end first. Push fully in until both locking tabs click securely.

6 Attach the case Slide the adapter's open end onto the wall-mount bracket. Push fully down to the end stop and visually check full seating. This side does not click.

7 Connect Bluetooth Long-press the Power/Bluetooth button to turn on the speaker. Open your phone's Bluetooth settings and select AquaKara_101 before inserting your phone.

Important: Remove any protective phone case or cover before inserting your phone. Do not force insertion or lid closure. If the phone does not fit, the lid cannot close fully, or the snap-lock latch cannot lock securely, do not use the product with that phone.

8 Insert your phone Open the snap-lock latch and lift the lid. Insert your phone with its screen facing the clear window.

9 Close and seal Close the lid fully and lock the latch. Press the USB-C charging-port cover securely into place.

10 Adjust and play Adjust the rotation (360°) and tilt for portrait or landscape viewing. Start playback on your phone.

BLUETOOTH RECONNECTION

After first pairing, the speaker will try to reconnect to the last connected phone when powered on. To connect another phone, disconnect Bluetooth on the previous phone, or quickly double-press Power/Bluetooth to disconnect the current connection. Then select AquaKara_101 on the new phone.

BEFORE EACH SHOWER

Before each use, gently check that the wall-mount base and case connection are secure. Do not use if the base slides, turns against the wall, feels loose or cannot hold the case securely. Do not use damaged, contaminated or deformed mounting parts. Check that the lid, latch and USB-C port cover are fully closed. Incorrect installation may cause a fall and damage the product, phone or bathroom surface.

For charging instructions, see Charging Before Use.

BASIC CONTROLS

Button	Function
Power/Bluetooth	Long press to power on/off
Power/Bluetooth	Single press to play or pause audio/video
Power/Bluetooth	Quick double-press to disconnect current Bluetooth connection
Volume +	Press to increase volume one step
Volume -	Press to decrease volume one step
Next Track	Press to skip to next track
Previous Track	Press to return to previous track

Button functions may vary depending on the connected phone, app, or Bluetooth connection status.

2. PRODUCT INFORMATION & SAFETY

ESSENTIAL PRODUCT INFORMATION

Bluetooth Frequency	2.402 GHz–2.480 GHz
Maximum RF Power	3.91 dBm EIRP
Charging Input	DC 5 V / 1 A, USB-C
Compatible Phone Size	Maximum bare-phone body dimensions: 170 mm high × 86 mm wide. Both dimensions must be within these limits. Remove any protective phone case or cover before insertion. Do not force the phone into the case or the lid closed. Foldable smartphones are not officially supported.

SAFE SHOWER USE & CARE

Do not submerge the product or use it underwater. Do not intentionally direct high-pressure water into the speaker area, charging port, latch or seal area.

Before use, check that the lid, latch, charging-port cover and wall mount are secure and the seal area is in good condition. Do not use with a phone that does not fit, prevents full lid closure or prevents secure latch engagement. Follow Before Each Shower.

Wipe the exterior dry before opening; keep liquids out of the opened interior.

Charge only when the product and USB-C port are dry. Do not charge in the shower, near running water or while wet.

EU / NORTHERN IRELAND CHARGING POWER

The power delivered by the charger must be between min **2.5 Watts** required by the radio equipment, and max **5.0 Watts** in order to achieve the maximum charging speed.



RF EXPOSURE NOTICE

This product contains a Bluetooth radio transmitter.

The product is designed for normal consumer use. Do not modify the product, antenna, electronics, enclosure, or internal components. Unauthorized changes or modifications may affect radio compliance and may void the user's authority to operate the product where applicable.

Use the product only as described in this owner's manual.

BUILT-IN BATTERY & DISPOSAL NOTICE

This product contains a built-in rechargeable battery that is not user-replaceable.

Do not attempt to remove, replace, open, puncture, crush, burn, incinerate, or expose the product or battery to excessive heat. Do not dispose of the product or battery in fire.

Where shown, the crossed-out wheeled bin symbol means this product should not be disposed of with unsorted household waste. Dispose of the product according to local laws and recycling requirements for electronic products and rechargeable batteries.

The built-in battery should be removed only by qualified recycling or service personnel where required by local regulations.

3. WARRANTY & COMPLIANCE

3.1 One-Year Limited Warranty

AQUAKARA Limited, under the AquaKara brand, warrants the AquaKara Shower Phone Case with Bluetooth Speaker, Model AquaKara_101, to the original purchaser against defects in materials and workmanship under normal use for one (1) year from the date of original retail purchase.

Proof of purchase may be required to obtain warranty service. If a valid warranty claim is approved, AquaKara or its authorized service provider may, at its option, repair the product, replace the product, or provide a refund.

This limited warranty applies only where permitted by law and does not limit any rights you may have under applicable consumer protection laws.

3.2 What Is Not Covered

This limited warranty does not cover damage, defects, or loss caused by:

- Accident, misuse, abuse, neglect, improper care, or failure to follow this owner's manual.
- Submersion, underwater use, use outside normal shower splash conditions, high-pressure water spray, charging while wet, or failure to securely close the USB-C charging-port cover before shower use.

- Installation or mounting on unsuitable surfaces, improper surface preparation, improper use of the Twist-Tight Wall Mount, or product fall caused by improper mounting.
- Use with a phone that does not fit properly, forcing the case closed, or using a damaged, oversized, or improperly positioned phone.
- Exposure to soap, shampoo, conditioner, oils, cleaning chemicals, hard water/mineral buildup, or steam exposure beyond normal shower conditions.
- Unauthorized modification, repair, disassembly, or use with non-approved accessories.
- Normal wear and tear, cosmetic damage, scratches, fading, or damage that does not affect normal product operation.
- Products purchased from unauthorized resellers or second-hand sellers.

AquaKara is not responsible for damage to phones, devices, walls, tile, grout, glass, mirrors, bathroom surfaces, personal property, or loss of data.

3.3 Requesting Warranty Service

To request warranty service, contact AquaKara Customer Support before returning any product.

Do not return the product without first contacting AquaKara Customer Support.

AquaKara may require proof of purchase and may provide instructions for inspection, repair, replacement, or refund.

Warranty service is subject to applicable local laws.

3.4 Customer Support

For product support, warranty questions, or replacement assistance, contact:

AquaKara Customer Support

Email: support@aquakara.com

Please include your product model number, proof of purchase, and a description of the issue when contacting support.

3.5 FCC Statement - United States

FCC ID: 2BVTX-AK101

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For radio-frequency exposure information, see Section 3.8 RF Exposure Notice.

3.6 ISED Statement - Canada

IC: 35513-AK101

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

French / Français:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage.
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

3.7 EU / UK Compliance Documents

Where applicable, EU and UK compliance documents for the AquaKara Shower Phone Case with Bluetooth Speaker, Model AquaKara_101, are available at:

[www.aquakara.com/compliance]

Detailed regional compliance information, including responsible person, importer, or supplier details where required, may be provided on a separate regional compliance insert, product label, package label, or other accompanying documentation.

3.8 RF Exposure Notice

This product contains a Bluetooth radio transmitter.

The product is designed for normal consumer use. Do not modify the product, antenna, electronics, enclosure, or internal components. Unauthorized changes or modifications may affect radio compliance and may void the user's authority to operate the product where applicable.

Use the product only as described in this owner's manual.

3.9 Built-In Battery & Disposal Notice

This product contains a built-in rechargeable battery that is not user-replaceable.

Do not attempt to remove, replace, open, puncture, crush, burn, incinerate, or expose the product or battery to excessive heat. Do not dispose of the product or battery in fire.

Where shown, the crossed-out wheeled bin symbol means this product should not be disposed of with unsorted household waste. Dispose of the product according to local laws and recycling requirements for electronic products and rechargeable batteries. The built-in battery should be removed only by qualified recycling or service personnel where required by local regulations.